 



# Ruijie Reyee RG-RAP6262(G) Access Point

## Installation Guide

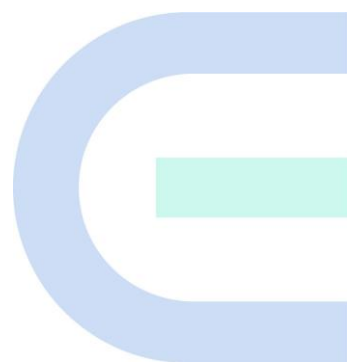

## Copyright

Copyright © 2024 Ruijie Networks

All rights are reserved in this document and this statement.

Without the prior written consent of Ruijie Networks, any organization or individual shall not reproduce, extract, back up, modify, or propagate the content of this document in any manner or in any form, or translate it into other languages or use some or all parts of the document for commercial purposes.

 and other Ruijie networks logos are trademarks of Ruijie Networks.

All other trademarks or registered trademarks mentioned in this document are owned by their respective owners.

## Disclaimer

The products, services, or features you purchase are subject to commercial contracts and terms, and some or all of the products, services, or features described in this document may not be available for you to purchase or use. Except for the agreement in the contract, Ruijie Networks makes no explicit or implicit statements or warranties with respect to the content of this document.

The names, links, descriptions, screenshots, and any other information regarding third-party software mentioned in this document are provided for your reference only. Ruijie Networks does not explicitly or implicitly endorse or recommend the use of any third-party software and does not make any assurances or guarantees concerning the applicability, security, or legality of such software. You should choose and use third-party software based on your business requirements and obtain proper authorization. Ruijie Networks assumes no liability for any risks or damages arising from your use of third-party software.

The content of this document will be updated from time to time due to product version upgrades or other reasons, Ruijie Networks reserves the right to modify the content of the document without any notice or prompt.

This manual is designed merely as a user guide. Ruijie Networks has tried its best to ensure the accuracy and reliability of the content when compiling this manual, but it does not guarantee that the content of the manual is completely free of errors or omissions, and all the information in this manual does not constitute any explicit or implicit warranties.

# Preface

## Intended Audience

This document is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

## Technical Support

- Official Website of Ruijie Reye: <https://reyee.ruijie.com>
- Technical Support Website: <https://reyee.ruijie.com/en-global/support>
- Case Portal: <https://www.ruijienetworks.com/support/caseportal>
- Community: <https://community.ruijienetworks.com>
- Technical Support Email: [service\\_rj@ruijienetworks.com](mailto:service_rj@ruijienetworks.com)
- Online Robot/Live Chat: <https://reyee.ruijie.com/en-global/rita>

## Conventions

### 1. Signs

The symbols used in this document are described as follows:

---

#### **Danger**

An alert that calls attention to safety operation instructions that if not understood or followed when operating the device can result in physical injury.

---

#### **Warning**

An alert that calls attention to important rules and information that if not understood or followed can result in data loss or equipment damage.

---

#### **Caution**

An alert that calls attention to essential information that if not understood or followed can result in function failure or performance degradation.

---

#### **Note**

An alert that contains additional or supplementary information that if not understood or followed will not lead to serious consequences.

---

#### **Specification**

An alert that contains a description of product or version support.

---

## **2. Note**

This manual provides the device installation steps, hardware troubleshooting, module technical specifications, and specifications and usage guidelines for cables and connectors. It is intended for the users who have some experience in installing and maintaining network hardware. At the same time, it is assumed that the users are already familiar with the related terms and concepts.

# Contents

Preface.....	1
1 Product Overview .....	1
1.1 Technical Specifications.....	1
1.2 Appearance .....	3
1.3 Ports .....	3
1.4 Power Supply .....	3
2 Preparing for Installation .....	4
2.1 Grounding and Lightning Protection.....	4
2.2 Preparing the Installation Site.....	4
2.2.1 Temperature and Humidity Requirements .....	5
2.2.2 Outdoor Installation .....	5
2.2.3 Waterproof .....	5
2.2.4 EMI.....	5
2.2.5 Installation Tools.....	5
2.3 Checking before Installation .....	6
3 Installing the Access Point .....	7
3.1 Installation Flowchart.....	7

3.2 Before You Begin.....	7
3.3 Precautions.....	7
3.4 Installing the Device.....	8
3.4.1 Wall Mounting .....	8
3.4.2 Vertical Pole Mounting .....	8
3.4.3 Horizontal Pole Mounting .....	9
3.5 Connecting Cables.....	10
4 Appendix A Connectors and Media.....	12
5 Appendix B Package Contents .....	14

# 1 Product Overview

The RG-RAP6262(G) is an outdoor wireless access point (AP) designed by Ruijie Networks for high-speed wireless networks. Adhering to the latest 802.11ax standard, the AP delivers an access rate of up to 1200Mbps@5G + 575Mbps@2.4G. RAP6262(G) features security, radio frequency (RF) control, mobile access, Quality of Service (QoS) and seamless roaming. In addition, it can be managed by RG-WS series wireless access controllers (ACs) to implement wireless data forwarding, security, and access control.

The IP68 design adapts to inclement outdoor environments such as the cold and humidity. This substantially simplifies installation and maintenance. RAP6262(G) supports PoE to take over challenges in a wide variety of deployment scenarios, including large-scaled campuses, enterprises, hospitals and Wi-Fi hotspots.

## 1.1 Technical Specifications

Table 1-1 Technical Specifications of RG-RAP6262(G)

<b>Model</b>	RG-RAP6262(G)
<b>Dimensions (L x W x H)</b>	222 mm x 200 mm x 166 mm (8.74 in. x 7.87 in. x 6.54 in.)
<b>Access Rate</b>	Built-in antenna: 1775 Mbps 2.4 GHz: up to 575 Mbps 5 GHz: up to 1200 Mbps
<b>Operating Frequency</b>	802.11b/g/n/ax: 2.4 GHz to 2.483 GHz 802.11a/n/ac/ax: 5.150 GHz to 5.350 GHz, 5.47 GHz to 5.725 GHz, 5.725 GHz to 5.850 GHz (Country-Specific)
<b>Maximum Transmit Power</b>	500 mW (Country-Specific)
<b>Antenna Type</b>	Built-in omnidirectional antenna
<b>Antenna Gain</b>	2.4 GHz: 3 dBi 5 GHz: 4 dBi
<b>Beam Width</b>	2.4 GHz: E: 30°; H: 360° 5 GHz: E: 30°; H: 360°
<b>Ports</b>	Two 10/100/1000 Base-T Ethernet ports Uplink LAN 1/PoE port supports PoE
<b>FIT/FAT Mode</b>	Not supported
<b>LED</b>	System and port status indicators
<b>Power Supply</b>	12 V DC/2 A

	IEEE 802.3at (PoE+)
<b>Power Consumption</b>	≤ 18 W
<b>Temperature</b>	Operating: -30°C to 65°C (-22°F to 149°F) Storage: -40°C to 85°C (-40°F to 185°F)
<b>Humidity</b>	Operating: 0% to 100% (non-condensing) Storage: 0% to 100% (non-condensing)
<b>IP Rating</b>	IP68
<b>Weight (Without Bracket)</b>	1.2 kg (2.65 lbs., without mounting bracket)
<b>Certification</b>	CE

Table 1-2 LEDs of RG-RAP6262(G)

Indicator	Status	Meaning
Wi-Fi (Green)	Blinking	Data is transmitted by Wi-Fi.
	Solid on	Wi-Fi is enabled and no data is transmitted.
	Off	Wi-Fi is disabled.
SYS(Blue)	Blinking	Fast blinking: The device is being initialized. Slow blinking (0.5 Hz): The device cannot access the Internet. Blinking twice*: <ol style="list-style-type: none"> <li>1. Restoring the factory settings.</li> <li>2. Upgrading the firmware.</li> <li>3. Restoring the image file.</li> </ol> <b>*In this case, please do not power off the device.</b>
	Solid on	The device is working properly.
	Off	The device is powered off.
LAN 1(Green)	Blinking	The port is up and data is transmitted.
	Solid on	The port is up and no data is transmitted.
	Off	The port is not connected.
LAN 2(Green)	Blinking	The port is up and data is transmitted.
	Solid on	The port is up and no data is transmitted.
	Off	The port is not connected.

Table 1-3 Reset Button

Button	Function	Operation
Reset	Reboot	Press the button for less than 2 seconds, and the device will be rebooted.
	Restore Factory Settings	Press the button for over 5 seconds, and the device will restore the factory settings.



## 1.2 Appearance


The RG-RAP6262(G) provides a Wi-Fi indicator, a SYS indicator, and two LAN port indicators. The label is located on the top of the mounting arm.

Figure 1-1 Appearance



## 1.3 Ports

Figure 1-2 Ports

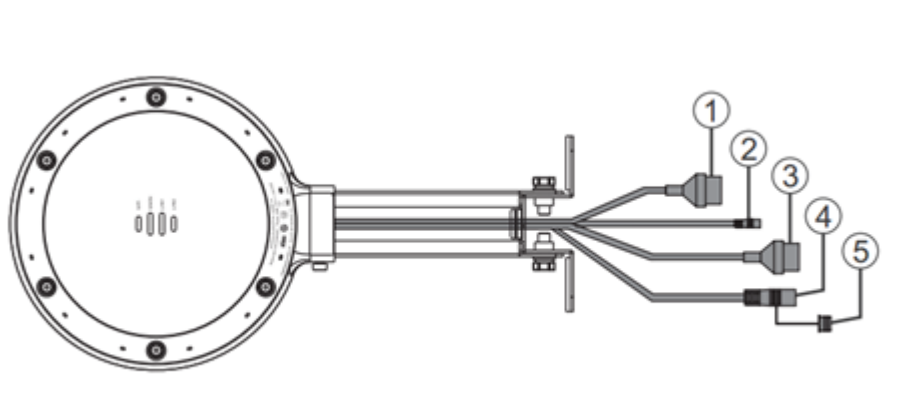

Note	
1. 10/100/1000BASE-T Ethernet port	4. Reset button
2. DC power supply port	5. Waterproof cap
3. 10/100/1000BASE-T Ethernet port/PoE port	

## 1.4 Power Supply

The AP supports 802.3at PoE (port LAN 1) or 12 V DC/2 A power supply (If needed, you can buy the adapter from Ruijie Networks).

# 2 Preparing for Installation

---

**Note**

- To prevent device damage and physical injury, please read carefully the safety recommendations described in this chapter.
  - The following safety suggestions do not cover all possible hazardous situations.
- 

## 2.1 Grounding and Lightning Protection

- Keep the grounding connection within 30 m, and use a 40mm x 4mm or 50mm x 5mm grounding bar of hot-dip zinc-coated flat steel sheet.
- When the connection cable between the main grounding conductor and local equipotential earthing terminal board (LEB) on each floor is shorter than 2 meters, use a stranded copper wire with a sectional area not less than 1.318 mm<sup>2</sup> (16 AWG) for the connection cable.
- Use a shielded network cable if possible, ensure that devices connected to both ends of the shielded network cable are reliably grounded, and make sure that the sheath of the shielded network cable is also grounded if possible. If no shielded network cable is available, wire the network cable through a steel pipe and bury the steel pipe for lead-in, and properly ground both ends of the steel pipe.
- No additional lightning protector is required as a high-profile lightning protector is built in the RG-RAP6262(G), and the antenna port and power port support 6kV lightning protection. If a lightning protector of a higher profile is available, configure the lightning protector optionally. Before the configuration, connect the lightning protector to the ground cable.
- Use a power cable with the PE end to ground the power supply (AC). Ensure that the PE end is properly grounded, with a ground resistance less than 5 ohms. Do not use a two-wire power cable with only the live (L) wire and naught (N) wire. Do not connect the N wire to the protection ground cable of other communication devices, and ensure that the L wire and N wire are properly connected.
- Ensure that the ground resistance is less than 5 ohms. In areas with high soil resistivity, reduce the soil resistivity via measures such as spreading resistivity reduction mixture around the grounding conductor.

## 2.2 Preparing the Installation Site

- Do not expose the AP to high temperature, dust, or harmful gases.
- Do not install the AP in an area prone to fire or explosions.
- Keep the AP away from EMI sources such as large radar stations, radio stations, and substations.
- Do not subject the AP to unstable voltage, vibration, and noises.
- Keep the AP at least 500 meters away from the ocean and do not face it towards the sea breeze.
- The installation site should be protected from water and flooding, seepage, dripping, or condensation.
- The installation site should be selected according to network planning, communications equipment features and considerations such as climate, hydrology, geology, earthquake, electric power, and transportation.

## 2.2.1 Temperature and Humidity Requirements

Table 2-1 Temperature and Humidity Requirements

Operating Temperature	Operating Humidity:
-30°C to 65°C (-22°F to 149°F)	0% to 100% RH (non-condensing)

## 2.2.2 Outdoor Installation

The AP can be installed outdoors and mounted on a wall or a pole.

## 2.2.3 Waterproof

- Use waterproof caps to seal the unused ports.
- After using the reset button and DC power port, please ensure that the caps are put back.
- The network cable needs to be threaded through the cable gland before connecting to the AP. For details, see Chapter 3 *Installation*.

## 2.2.4 EMI

All interference sources (from outside or inside of the device or application system) affect the device by capacitive coupling, inductive coupling, or electromagnetic waves.

Electromagnetic interference (EMI) occurs due to electromagnetic radiation or conduction, depending on the transmission path.

Radiation interference occurs when energy (usually radio frequency energy) is emitted from a device and propagated through space to disrupt other devices. The interference source can be part of disrupted system or a fully electrically isolated unit. Conduction interference occurs when interference is transferred from one unit to another through cables, which are usually electromagnetic wires or signal cables connected between the source and the device(s) experiencing interference. Conduction interference often affects the power supply of the device. It is eliminated by using filters. Radiation interference can influence the path of any signal from the device and is difficult to shield.

- Take effective measures against interference from the power grid.
- Keep the AP far away from the grounding or lightning protection devices for power equipment.
- Keep the AP away from high-power radio stations, radar stations, and high-frequency high-current devices.
- Take electrostatic shielding measures.

## 2.2.5 Installation Tools

Table 2-1 Installation Tools

<b>Tools</b>	Marker, Phillips (crosshead) screwdriver, slotted screwdriver, drill, paper knife, crimping pliers, diagonal pliers, wire stripper, network cable tester, related power and fiber cables, wrench, hammer, cable ties, ESD tools, multimeter
--------------	---

 The tool kit and cables are customer-supplied.

## 2.3 Checking before Installation


Please check your materials carefully against the package contents. If there are any errors, please contact your distributor.

# 3 Installing the Access Point

**Note**

- Before installing the device, make sure you have carefully read the requirements described in Chapter 2.

## 3.1 Installation Flowchart

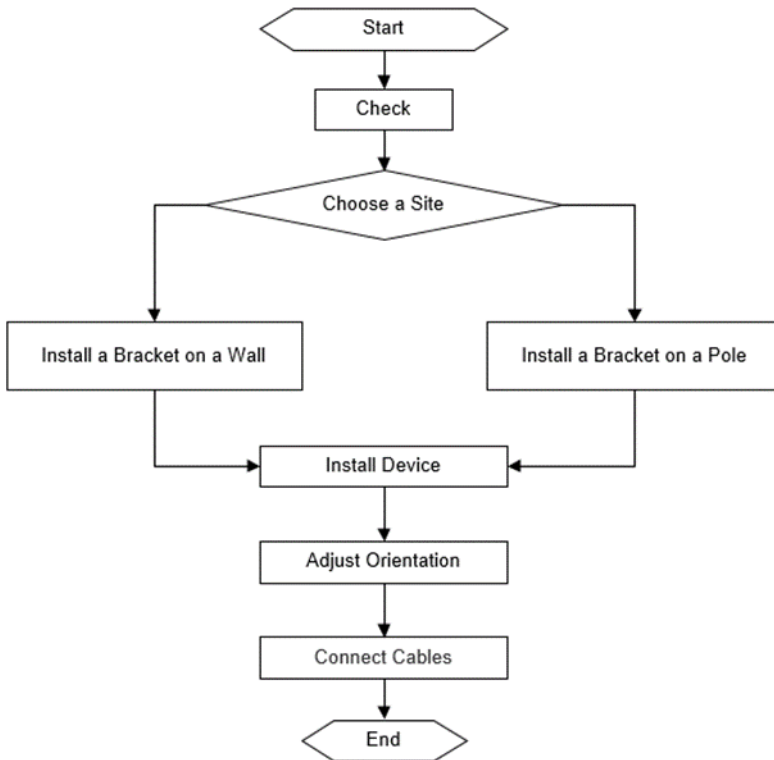

## 3.2 Before You Begin

Before you install the AP, verify that all the parts in the package contents are there and make sure that:

- The installation site meets temperature and humidity requirements.
- The installation site is equipped with a proper power supply.
- Network cables are in place.

## 3.3 Precautions

The outdoor AP can be mounted on a wall and a pole (diameter: 50 mm to 70 mm). If the diameter of the pole is out of the range, the hose clamp is customer-supplied. In this case, it is recommended that you use a hose clamp with thickness of 2.5mm at least. The installation site varies due to on-the-spot surveys conducted by technical personnel.

Please make full preparations as described in Chapter 2 and observe the following precautions before installing the device.

- Before connecting the power supply, make sure the external power supply matches the power module of the AP.
- Before connecting the power cord, make sure the power module is turned off.
- When connecting the power cord to a binding post, make sure their colors are the same.
- Make sure the power supply is properly connected.


## 3.4 Installing the Device

### 3.4.1 Wall Mounting

Use the mounting plate and expansion bolts to implement wall mounting.


1. Attach the mounting plate to the wall (ensure that the semicircle opening is downward vertically) and mark the locations of screw holes. Secure the mounting plate on the wall with M8 x 60 expansion bolts.

**Figure 3-1 Installing the Mounting Plate**

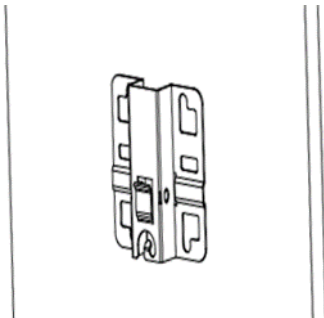

2. Install the access point and the connecting rod to the mounting plate on the wall, and tighten the M8 x 20 screws to complete installation.

**Figure 3-2 Wall Mounting**

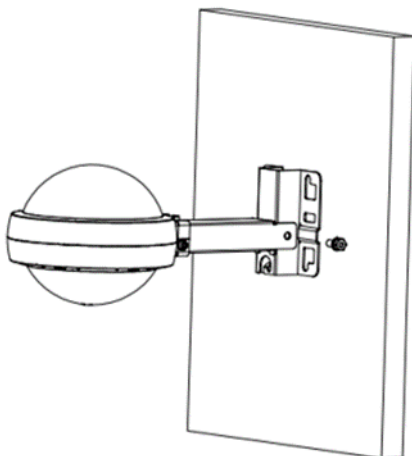


### 3.4.2 Vertical Pole Mounting

1. Secure the mounting plate to the vertical pole by threading two clamps through the mounting plate, and fasten the clamps with screws.

**Figure 3-3 Mounting the Plate on a Pole**

2. Install the access point and the connecting rod to the mounting plate with M8 x 20 screws.

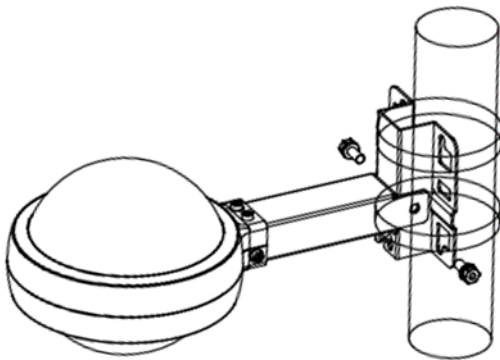**Figure 3-4 Vertical Pole Mounting**

### 3.4.3 Horizontal Pole Mounting


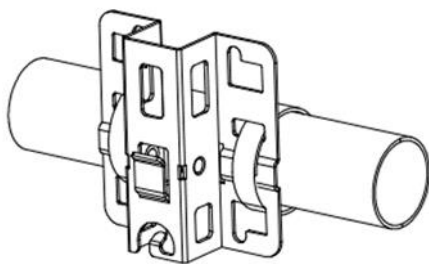
**Figure 3-5 Mounting the Plate on a Pole**

Figure 3-6 Horizontal Pole Mounting

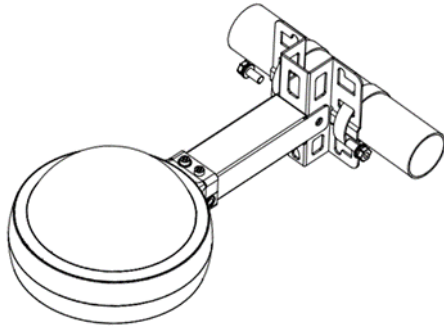

**Note**


The procedures of horizontal pole mounting are similar to that of vertical pole mounting.

### 3.5 Connecting Cables


**Caution**

The waterproof materials are customer-supplied.

1. Trim an Ethernet cable according to the distance between the access point and the power supply.
2. Insert the unterminated end of the Ethernet cable through part D, C and B in sequence.

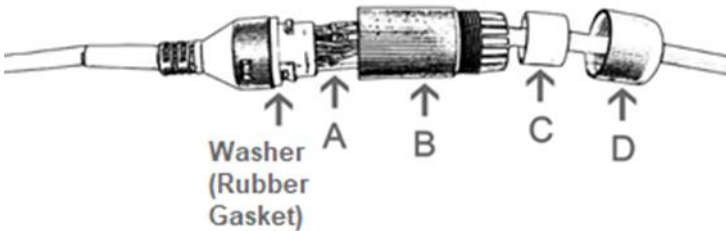

3. Install an RJ45 connector on the unterminated end of the Ethernet cable with an Ethernet cable installation tool.
4. Insert the RJ45 connector into the LAN 1/PoE/uplink port of the access point, and tighten part B, C and D in sequence.
5. If you want to install the cable gland without an Ethernet cable threaded through it, insert the waterproof rubber rod into the washer (rubber gasket), and tighten part B, C and D in sequence.

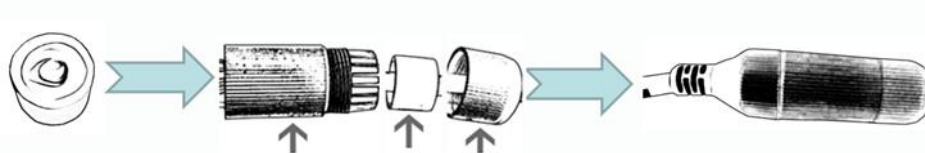

**Caution**

Please ensure that the RJ45 connector is properly inserted. Otherwise, the connector may be damaged when the waterproof cap is tightened. Before removing the network cable, please remove the waterproof cap first and then the RJ45 connector.



**! Warning**

The device should not be installed in the place prone to water accumulation, seepage, dripping, and condensation.

It is recommended to install the device horizontally.

If any requirement above cannot be fulfilled, please use waterproof duct tape and waterproof plaster.

---

# 4 Appendix A Connectors and Media


## 1000BASE-T/100BASE-TX/10BASE-T

The 1000BASE-T/100BASE-TX/10BASE-T is a 10/100/1000 Mbps auto-negotiation port that supports auto MDI/MDIX.

Compliant with IEEE 802.3ab, 1000BASE-T requires Category 5e 100-ohm UTP or STP (STP is recommended) with a maximum distance of 100 meters (328 feet).

1000BASE-T requires all four pairs of wires be connected for data transmission, as shown in Figure 7-1.

Figure 4-1 1000BASE-T Connection

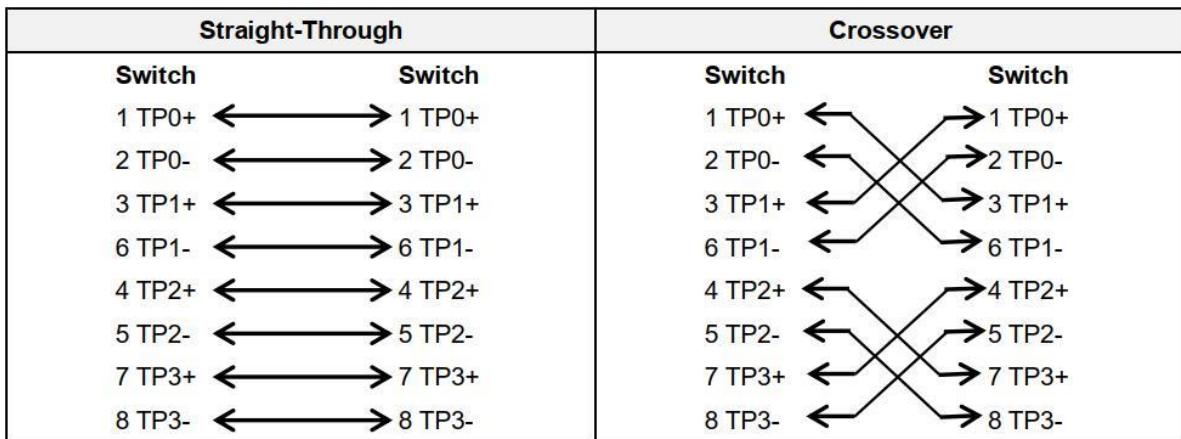


10BASE-T uses Category 3, 4, 5 100-ohm UTP/STP and 1000BASE-T uses Category 5 100-ohm UTP/STP for connections. Both support a maximum length of 100 meters. Figure A-2 shows 100BASE-TX/10BASE-T pin assignments.

Figure 4-2 100BASE-TX/10BASE-T Pin Assignments

Pin	Socket	Plug
1	Input Receive Data+	Output Transmit Data+
2	Input Receive Data-	Output Transmit Data-
3	Output Transmit Data+	Input Receive Data+
6	Output Transmit Data-	Input Receive Data-
4,5,7,8	Not used	Not used

Figure 4-3 shows wiring of straight-through and crossover cables for 100BASE-TX/10BASE-T.

**Figure 4-3 100BASE-TX/10BASE-T Connection**

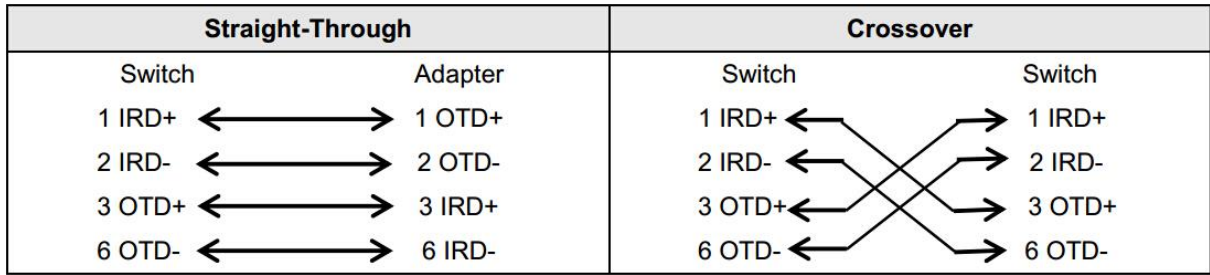

# 5 Appendix B Package Contents

Item	Quantity	Remark
RG-RAP6262(G) Access Point	1	
Mounting Plate	1	
Connecting Rod (Pre-installed on Access Point)	1	
M8 x 20 Screws	2	
Cable Glands (Pre-installed on Access Point)	2	
Pole Clamps	2	
Expansion Bolts (M8 x 60)	4	
Quick Start Guide	1	
Management Software	1	Installed on the access point upon delivery